

## Dräger X-plore® 1300 Particulate Respirators




ST-2285-2006

### Donning the mask



ST-8026-2006

1 Hold the mask in your hand with the head straps hanging down.

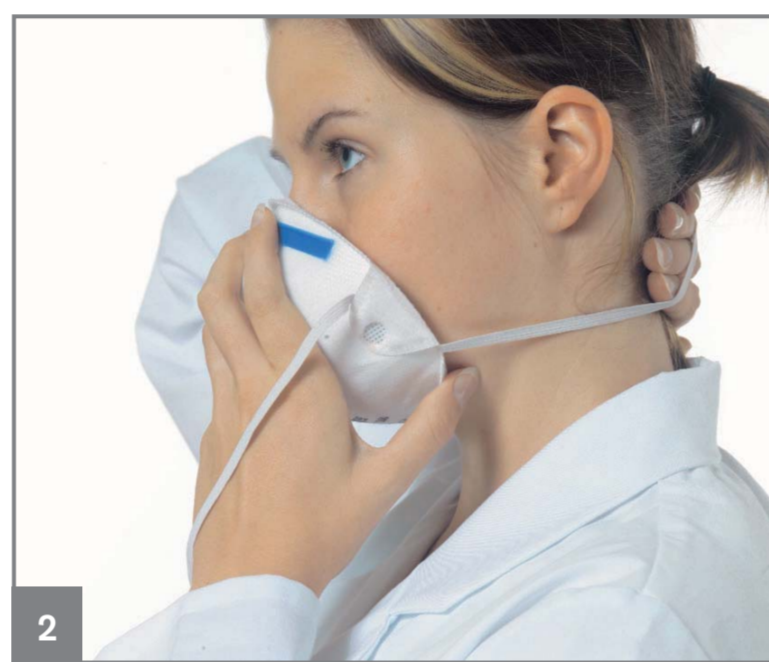

ST-8031-2006

2 Position the mask under your chin and over your nose and slip the short strap over your head to the back of your neck.



ST-8052-2006


3 Pull the longer strap into position at the back of your head, ensure it sits above your ears. Slide the adjustment knob toward your head for an optimal fit.



ST-8059-2006

4 Adjust the nose clip to minimize leakage.

### User seal check

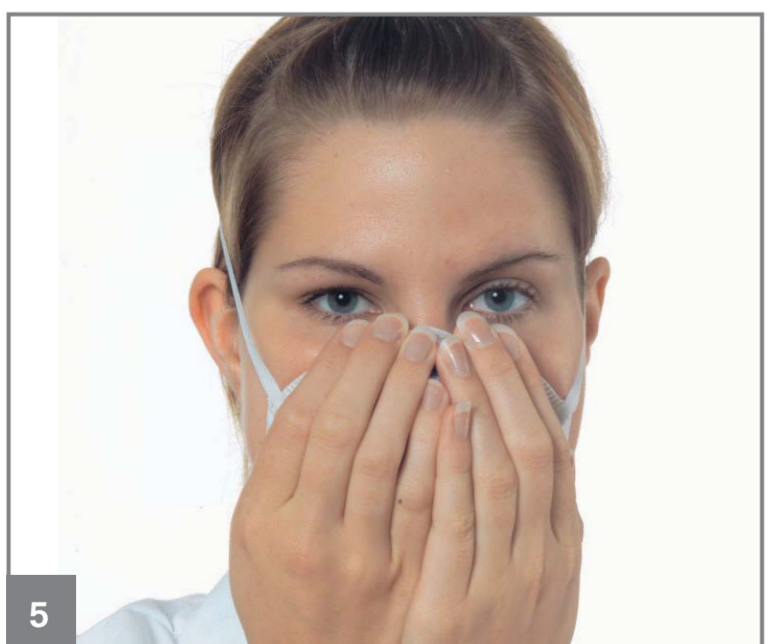

ST-8067-2006

5 Cover the mask with both hands and exhale. The mask should inflate slightly. If any air escapes at the sides of the mask, readjust the mask until it fits properly and ensure that the nose clip is positioned correctly on your nose.



ST-8078-2006

Ready for use.

Warning: Beards in the sealing area of the mask can cause leaks. Always make sure the mask forms a tight seal prior to entering a hazardous atmosphere. This poster is not a replacement for reading and understanding the instructions for use prior to using the specified mask! Failure to do so could result in sickness or death! For further assistance concerning proper use, ask your supervisor or call your local Dräger organization at +1 800 922 5518.